


*By clicking the "MODEL", you can display the Performance Chart Simulation.

MODEL	OPERATING RANGE	VOLTAGE			NO LOAD			AT MAXIMUM EFFICIENCY			STALL		
		NOMINAL	SPEED	CURRENT	SPEED	CURRENT	TORQUE	OUTPUT	TORQUE	CURRENT			
		V	r/min	A	r/min	A	mN·m g·cm	W	mN·m g·cm	A			
RF-500TB	14415	1.5 - 9.0	5	3100	0.026	2540	0.12	1.23	12.6	0.33	6.86	70	0.54
	12560	4 - 14	12	5500	0.025	4630	0.13	1.79	18.2	0.86	11.3	115	0.71



UNIT: MILLIMETERS

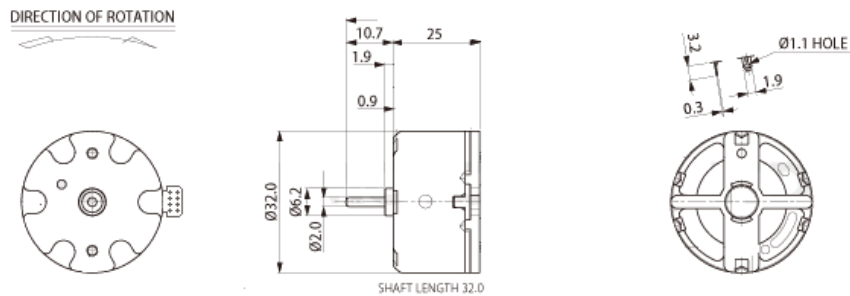